

Atlas Large (1-3)

03048 The modular Atlas wardrobe and cabinet range offers you three types with the following external dimensions:

- Small: height: 77 cm - depth: 52,5 cm
- Medium: height: 99 cm - depth: 52,5 cm
- Large: height: 186 cm - depth: 56 cm

Frame

- 2 side panels with a front lath, back, bottom and a plinth on the front and backside.
- Ceiling and frieze on the top side.
- The panels are made of melaminated or veneered (*) chipboard (thickness: 19 mm).
- The panels are joined together by eccentric cams and dowels.
- The back is milled into a groove in the side panels.
- 4 adjustable synthetic glides.

Interior finishing depends on the chosen type

- Fixed or detachable shelves (thickness: 19 mm).
- Vertical panel in the middle.
- Chromium-plated hanging rail of Ø 19 mm.

Doors and drawers depend on the chosen type

- High-quality self-closing hinges, opening up to 135°.
- Metal design handle.
- Removable drawers. The front surface of the drawers is made of melaminated or veneered (*) chipboard (thickness: 19 mm).
- The drawers are installed in the frame by means of metal rails.

Colours


We would like to refer to our extensive colour gamut.
Sample card + samples available on request.

(*) Option



Dimension

- Model Large (1-3): height 186 cm, length 86/99/125 cm, depth 56 cm

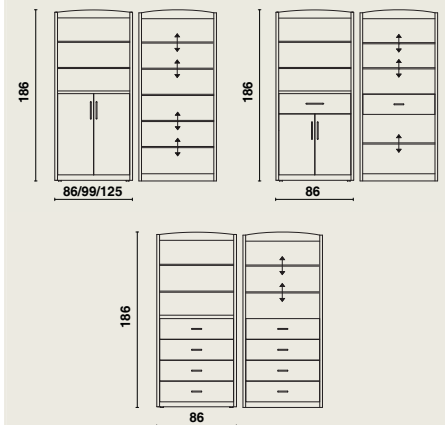

Materials and finishing

- Wood: - chipboard (melaminated, beech veneer (*)).
- MDF (stratified).
- Withstands the common cleaning products.

For more information about the **materials, construction and maintenance**: please consult our material lists.

Options

- Finishing in veneer.
- Cylinder lock.
- Built-in steel safe with cylinder lock.
- Mirror.

