

# Atlas Large (4-10)

**03048** The modular Atlas wardrobe and cabinet range offers you three types with the following external dimensions:

- Small: height: 77 cm - depth: 52,5 cm
- Medium: height: 99 cm - depth: 52,5 cm
- Large: height: 186 cm - depth: 56 cm

## Frame

- 2 side panels with a front lath, back, bottom and a plinth on the front and backside.
- Ceiling and frieze on the top side.
- The panels are made of melaminated or veneered (\*) chipboard (thickness: 19 mm).
- The panels are joined together by eccentric cams and dowels.
- The back is milled into a groove in the side panels.
- 4 adjustable synthetic glides.

## Interior finishing depends on the chosen type

- Fixed or detachable shelves (thickness: 19 mm).
- Vertical panel in the middle.
- Chromium-plated hanging rail of Ø 19 mm.

## Doors and drawers depend on the chosen type

- High-quality self-closing hinges, opening up to 135°.
- Metal design handle.
- Removable drawers. The front surface of the drawers is made of melaminated or veneered (\*) chipboard (thickness: 19 mm).
- The drawers are installed in the frame by means of metal rails.

## Materials and finishing





- **Wood:** - chipboard (melaminated, beech veneer (\*)).  
- MDF (stratified).
- Withstands the common cleaning products.

For more information about the materials, construction and maintenance: please consult our material lists.



## Dimension

- Model Large (4-10): height 186 cm, length 85.5/99/125/145 cm, depth 56 cm

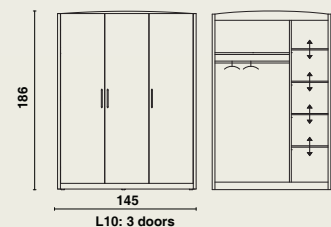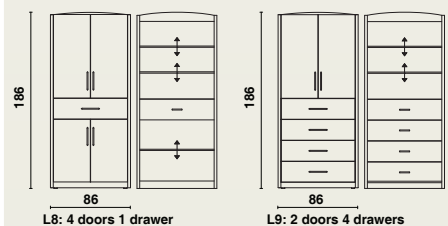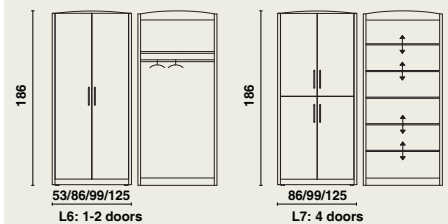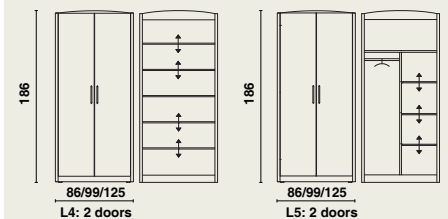

## Options

- Finishing in veneer.
- Cylinder lock.
- Built-in steel safe with cylinder lock.
- Mirror.
- Doors opening up to 270°.
- Sliding doors (only possible on L4, L5 and L6).

## Colours

We would like to refer to our extensive colour gamut.  
Sample card + samples available on request.

## Handles

- Open handle
- Closed handle

(\*) Option

