

Atlas Medium

03133 The modular Atlas wardrobe and cabinet range offers you three types with the following external dimensions:

- Small: height: 77 cm - depth: 52,5 cm
- Medium: height: 99 cm - depth: 52,5 cm
- Large: height: 186 cm - depth: 56 cm

Frame

- 2 side panels with a front lath, back, bottom and a plinth on the frontside.
- 2 reinforcement laths on the top side and a tabletop.
- The tabletop has rounded corners in double-sided stratified MDF board. Thickness: 24 mm.
- The panels are made of melaminated or veneered (*) chipboard (thickness: 19 mm).
- The panels are joined together by eccentric cams and dowels.
- The back is milled into a groove in the side panels.
- 4 adjustable synthetic glides.

Interior finishing depends on the chosen type

- Fixed or detachable shelves (thickness: 19 mm).
- Vertical panel in the middle.
- Chromium-plated hanging rail of Ø 19 mm.


Doors and drawers depend on the chosen type

- High-quality self-closing hinges, opening up to 135°.
- Metal design handle.
- Removable drawers. The front surface of the drawers is made of melaminated or veneered (*) chipboard (thickness: 19 mm).
- The drawers are installed in the frame by means of metal rails.



Dimension

- Model Medium: height 99 cm, length 126/147/166/194 cm, depth 52.5 cm

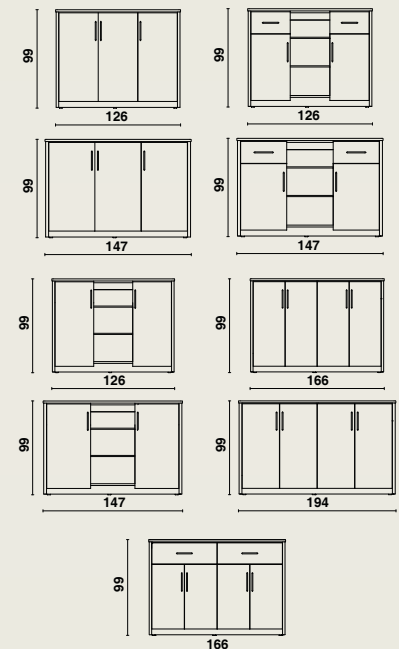

Materials and finishing

- Wood: - chipboard (melaminated, beech veneer (*)).
- MDF (stratified).
- Withstands the common cleaning products.

For more information about the materials, construction and maintenance: please consult our material lists.

Options

- Finishing in veneer.
- Cylinder lock.
- Built-in steel safe with cylinder lock.
- 4 hidden castors Ø 50 mm.

Colours

We would like to refer to our extensive colour gamut.
Sample card + samples available on request.

(*) Option

