

Domus Club-3 Flex

10039 Do you want to sit together or alone? The Domus Club makes ample combinations possible. Standing up is no problem, thanks to the firm, rounded armrests and the adapted seat height.

Support

- The rounded sides consist of 2 OSB boards, and are firmly connected to the seat structure by means of solid beech beams.
- The sides are upholstered with fire-retardant foam.
- The upholstery is finished with imitation leather and decorative stitching.
- Comfortable rounded armrests of ± 5 cm.
- All edges and corners have been rounded.
- No visible fastening elements.
- Solid beech legs, equipped with synthetic glides.


Seat structure

- Backrest and seat offer extra comfort, thanks to the comfort foam (backrest= 9 cm and seat= 11 cm).
- The rounded seat in front stimulates a fluent blood circulation.
- Comfortable seat height of 44 cm.
- Upholstered with fire-retardant foam and is finished with imitation leather.

Dimension

10039 | Domus Club-3 Flex:

- W 182 x D 71 x H 78 cm
- Seat height: 44 cm
- Seat dept: 50 cm
- Seat width: 173 cm
- Arm height: 64 cm

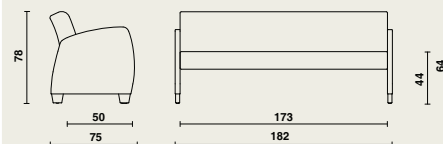

Materials and finishing

- Wood: beech (solid, laminated), OSB, MDF.
- Foam: CMHR- and CM-foam (fire-retardant).
- Upholstery: see collection.
- Resistant to the common cleaning products.

For further information about used **materials, constructions and maintenance**: consult our materialfiles.

Options

- Beech armrests.
- Armrests with removable upholstery.

Colours

We would like to refer to our extensive colour gamut.
Sample card + samples available on request.

