

Domus sofa bed medium

12695 The Domus sofa bed is very compact and space-saving. The userfriendliness makes this seat even more attractive.

Frame

- Frame made of various materials (solid wood, chipboard).
- 4 square legs (30 x 30 mm).
- The frame is completely covered with fire-retardant foam and upholstered.
- Removable seat cushion.
- Fixed backrest cushion, you only need to remove the seat cushion when unfolding the bed mechanism.
- Comfortable seat height of 45 cm.

Mattress platform


- Metal bed mechanism attached to the seat frame.
- Mattress platform equipped with rounded wooden slats to reinforce the seating part.
- Fire-retardant mattress included.
- Removable fire-retardant mattress cover with polyurethane coating.
- Folding and unfolding the bed is quick and easy in 3 movements.
- The mattress platform height (mattress included) is 46 cm.
- When the bed is folded out, the seat becomes the headrest, whereas the mattress platform and foot end rest on two fold-out brackets.




Dimensions

Domus sofa bed medium:

- W 100 x D 79 x H 45/65/80 cm.
- Total length when folded out: 234 cm.
- Seat depth: 50 cm.
- Mattress dimensions: 198 x 80 cm, thickness: 8 cm.
- Safe working load: 135 kg.

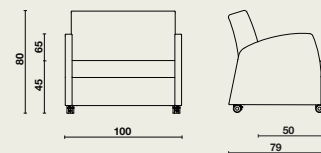

Folded out version

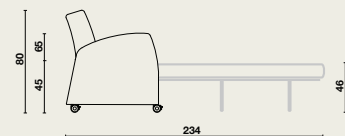

Materials and finishing

- Wood: solid beech, plywood, chipboard and MDF.
- Fire-retardant foam.
- Upholstery: see collection.
- Mattress: Cold foam CMHR (35 kg/m³).
- Mattress cover: Polyurethane coating.
- The mattress and the mattress cover are certified in accordance with fire standard CRIB 5.
- Resistant to the common cleaning products and disinfectants.

For further information about used **materials**, **constructions** and **maintenance**: consult our material files.

Options

- Design castors Ø 65 mm with brake.

Colours

We would like to refer to our extensive colour gamut.
Sample card + samples available on request.

