

# Ilana Hospital

**10955** The stylish Ilana bedside table is made of very durable materials such as solid laminate and aluminium.

The bedside table is also available in a double-sided version, and can be optionally equipped with a refrigerator and/or dinner tray.

## One-sided version (storage cabinet, open compartment, drawer)

- The sides are made of 8 mm solid laminate panels that are assembled between 4 aluminium corner profiles.
- Solid laminate doors.
- Equipped with high-quality self-closing hinges, opening up to 175°.
- Metal design handle.
- An open compartment is accessible from all sides.
- The drawer can be opened on both sides. It is made of steel plate and has 2 solid laminated fronts.
- The drawer glides on 2 synthetic rails.
- The drawer is equipped with a removable synthetic drawer tray.
- Aluminium and steel parts are protected by an epoxy-coating or an anodisation layer.
- Tabletop with rounded solid laminate corners.
- 4 design castors Ø 65 mm.

## Optional dinner tray Livia


- Folding.
- Easy to incline in both directions.
- The dinner tray has an upright edge.
- The folding part is fixed on a strong aluminium guiding profile that has been finished with an anodisation layer.
- The dinner tray is height-adjustable (between 79 and 112 cm) by means of a gas spring.
- Dimensions of the dinner tray: 63 x 40,5 cm.
- The gas spring is activated by means of a foot pedal.
- The dinner tray is made of fire-retardant ABS.
- The bedside table stands on 5 design castors Ø 65 mm.
- The dinner tray can be optionally provided with a Click 'n' turn mechanism which allows to move the dinner tray from one side to the other side of the bedside table.



## Dimension

**10955** | 51 x 42,5 x height 86 cm

**with dinner tray Livia** | 67 x 42,5 x height 86 cm

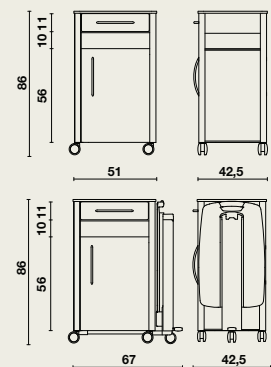

## Materials and finishing

- Solid laminate
- Metal: aluminium, steel.
- High-quality self-closing hinges.
- Withstands the common cleaning products.

For more information about the materials, construction and maintenance: please consult our material lists.

## Options

- Livia dinner tray.
- Refrigerator.
- Bottle holder.
- Electronic lock on the drawer.
- Cylinder lock on the drawer.
- 2nd drawer in the open compartment.
- Gallery.
- Cases for the telephone holder.
- Telephone holder.
- Removable tray with upright edges for the tabletop.
- 4 bumper castors.
- 4 castors with brakes.
- Click 'n' turn mechanism.

## Colours

We would like to refer to our extensive colour gamut.  
Sample card + samples available on request.

## Handles

- Open handle
- Closed handle

