

Mido Table

10914 Mido is a carefully designed table programme that combines functionality with stability. This table is very convenient for wheelchair users, as there are no aprons under the tabletop.

Support

- The legs are made of a round metal tube Ø 38 mm.
- The support is very strong, thanks to the use of a fastening plate and a reinforcing ridge.
- Thanks to the absence of aprons under the tabletop, the clearance height of the table is 73,5 cm.
- The metal legs are finished with an epoxy coating.
- The legs are equipped with synthetic glides.


Tabletop

- The top is made of a double-sided stratified chipboard (thickness: 20 mm).
- Both sides of the tabletop are finished with a HPL layer.
- Rounded edges and corners.




Dimensions

10914 | Mido table

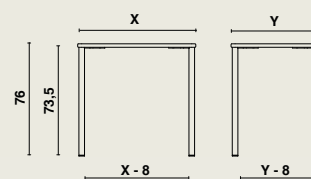

10914 | Mido coffee table



X (cm)	Y (cm)
70	50
80	60
80	80
120	80
140	80
160	80

Materials and finishing

- Wood: stratified chipboard.
- Solid laminate.
- Metal: epoxy-coating.

For further information about used **materials**, **constructions** and **maintenance**: consult our material files.

Options

- Solid laminate tabletop, thickness 12 mm.

Colours

We would like to refer to our extensive colour gamut.
Sample card + samples available on request.

