

# Quadra Care

**10480** The Quadra Care bedside table is very compact with a contemporary and rigid design.

## One-sided version (storage cabinet, open compartment, drawer)

- 2 side panels with a back, bottom, and a tabletop.
- Made of melaminated chipboard (thickness 19 mm).
- The side panels, the top of the storage cabinet and the bottom are connected to each other by means of wooden dowels. Then cold glue is used to create a strong cupboard frame.
- The tabletop is connected to the cabinet by means of eccentric cams.
- Storage cabinet with a removable shelf.
- High-quality self-closing hinges, opening up to 175°.
- Metal design handle.
- The removable drawer is made of metal sides, between which a wooden bottom and back have been attached.
- The drawer is installed in the cupboard frame by means of high-quality steel rails with an end stop.
- The metal parts are protected by an epoxy-coating.
- The tabletop is made of a double sided melaminated chipboard of 19 mm.
- 4 hidden castors Ø 50 mm.

## Optional dinner tray Livia

- Folding.
- Easy to incline in both directions.
- The dinner tray has an upright edge.
- The folding part is fixed on a strong aluminium guiding profile that has been finished with an anodisation layer.
- The dinner tray is height-adjustable (between 80 and 110 cm) by means of a gas spring.
- Dimensions of the dinner tray: 63 x 40,5 cm.
- The gas spring is activated by means of a foot pedal.
- The dinner tray is made of fire-retardant ABS.
- The bedside table stands on 5 design castors Ø 65 mm.
- The dinner tray can be optionally provided with a Click 'n' turn mechanism which allows to move the dinner tray from one side to the other side of the bedside table.

### Colours

We would like to refer to our extensive colour gamut. Sample card + samples available on request.


### Handles

- Open handle
- Closed handle



## Dimensions

**10480** | 48,5 x 47 x height 83 cm  
with dinner tray Livia | 65 x 47 x height 88 cm

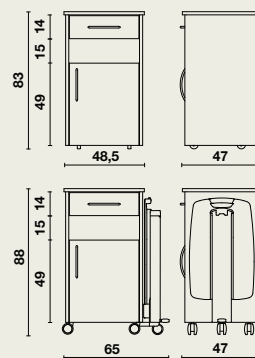

## Materials and finishing

- Wood: chipboard (melaminated).
- Metal: epoxy-coating (clear gray).
- High-quality self-closing hinges.
- Withstands the common cleaning products.

For more information about the materials, construction and maintenance: please consult our material lists.

## Options

- Finishing in veneer.
- Livia dinner tray.
- Tabletop in stratified board.
- Cylinder lock.
- Cases for accessories on the tabletop.
- 2nd drawer in the open compartment.
- Extensible tray (not possible in combination with 2<sup>nd</sup> drawer).
- 4 castors Ø 65 mm.
- 4 castors Ø 65 mm with brake.
- Click 'n' turn mechanism.

