

Quadra Care

10490 The Quadra Care with refrigerator, is a very compact bedside table with a contemporary and rigid design.

Version with refrigerator (refrigerator, open compartment, drawer)

- 2 side panels with back, bottom, and a tabletop.
- Made of melaminated chipboard (thickness 19 mm).
- The side panels, the top of the storage cabinet and the bottom are connected to each other by means of wooden dowels. Then cold glue is used to create a strong cupboard frame.
- The tabletop is connected to the cabinet by means of eccentric cams.
- Storage cabinet with refrigerator.
- Noiseless absorption refrigerator of "Dometic Mini-cool - Silencio DS 400 BI".
- Capacity: 34 litres.
- The door is finished with HPL.
- Built-in handle.
- The position of the handle is accentuated by means of a green accent.
- Interior lighting with LED and sensor.
- Spiral cable.
- The removable drawer is made of metal sides, between which a wooden bottom and back have been attached.
- The drawer is installed in the cupboard frame by means of high-quality steel rails with an end stop.
- Metal design handle.
- The metal parts are protected by an epoxy-coating.
- The tabletop is made out of a double sided melaminated chipboard of 19 mm.
- Edges out of PVC.
- 4 design twin castors Ø 65 mm.


Optional dinner tray Livia

- Folding.
- Easy to incline in both directions.
- The dinner tray has an upright edge.
- The folding part is fixed on a strong aluminium guiding profile that has been finished with an anodisation layer.
- The dinner tray is height-adjustable (between 80 and 110 cm) by means of a gas spring.
- Dimensions of the dinner tray: 63 x 40,5 cm.
- The gas spring is activated by means of a foot pedal.
- The dinner tray is made of fire-retardant ABS.
- The bedside table stands on 5 design castors Ø 65 mm.
- The dinner tray can be optionnaly provided with a Click 'n' turn mechanism which allows to move the dinner tray from one side to the other side of the bedside table.



Dimension

10490 | 48,5 x 47,5 x height 88 cm
with dinner tray Livia | 58,5 x 47,5 x height 88 cm

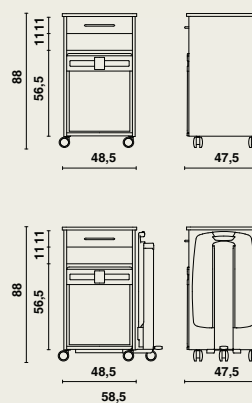

Materials and finishing

- Wood: chipboard (melaminated).
- Metal: epoxy-coating (clear gray).
- Withstands the common cleaning products.

For more information about the **materials, construction and maintenance**: please consult our material lists.

Options

- Finishing in veneer.
- Livia dinner tray.
- Tabletop is made out of stratified chipboard.
- Cylinder lock
- Telephone holder.
- Extensible tray.
- 4 design castors Ø 65 mm.
- 4 design castors Ø 65 mm with brake.
- Click 'n' turn mechanism.

Colours

We would like to refer to our extensive colour gamut.
Sample card + samples available on request.

Handles

- Open handle
- Closed handle

