

Sisto metal


Sisto is a carefully designed table combining style with stability. This table is very convenient for wheelchair users, thanks to the absence of side rails under the tabletop.

Support

- The legs are made of a square metal tube 40 x 40 mm.
- Each leg is fixed to the tabletop by means of a metal support with a central hidden fastening.
- The underside of the tabletop has no side rails, so that a free height of 73,5 cm is always guaranteed for the Sisto table.
- Wheelchair-accessible.
- The metal legs are finished with an epoxy coating.
- The legs are equipped with synthetic glides.

Tabletop

- The top is made of a stratified chipboard (thickness: 20 mm).
- The top and bottom of the tabletop are finished with a HPL layer.
- The table edges are finished in accordance with the choice of the tabletop (with a PVC layer or a veneered layer protected by a coat of varnish).

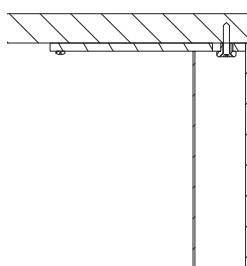

Central hidden fastening.


Colours

We would like to refer to our extensive colour gamut.
Sample card + samples available on request.




Dimensions

04627 | Sisto table

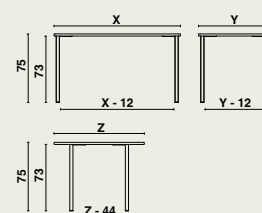

04608 | Sisto coffee table

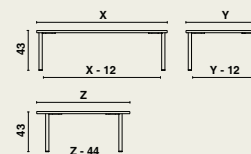

X (cm)	Y (cm)	Z (cm)
70	50	Ø 100
70	90	Ø 120
80	60	
80	80	
90	90	
120	80	
140	80	
160	80	

Materials and finishing

- Wood: chipboard.
- Metal: epoxy-coating.

For further information about used **materials**, **constructions** and **maintenance**: consult our materialfiles.

Options

- Tabletop made of solid lightweight chipboard without false edge on the bottom, thickness 38 mm.
- Tabletop made of solid laminate, thickness 12 mm.
- Specific dimensions possible on request.
- The legs can be optionally equipped with adjustable feet (not possible for Sisto coffee table).

